



TABLE OF CONTENTS

GRAPHENE NANOTUBES	4
TUBALL™	
PRODUCTS FOR:	
ENERGY STORAGE	14
TUBALL™ BATT H ₂ O	
TUBALL™ BATT NMP	
ELASTOMERS	32
TUBALL™ MATRIX 600-x series	
TUBALL™ LATEX	
COMPOSITES & COATINGS	58
TUBALL™ MATRIX 200 / 300-x series	
TUBALL™ COAT_E	
THERMOPLASTICS	72
TUBALL™ MATRIX 800-x series	
SAFETY INFORMATION	86
ABOUT OCSIAI	88
CONTACTS	90

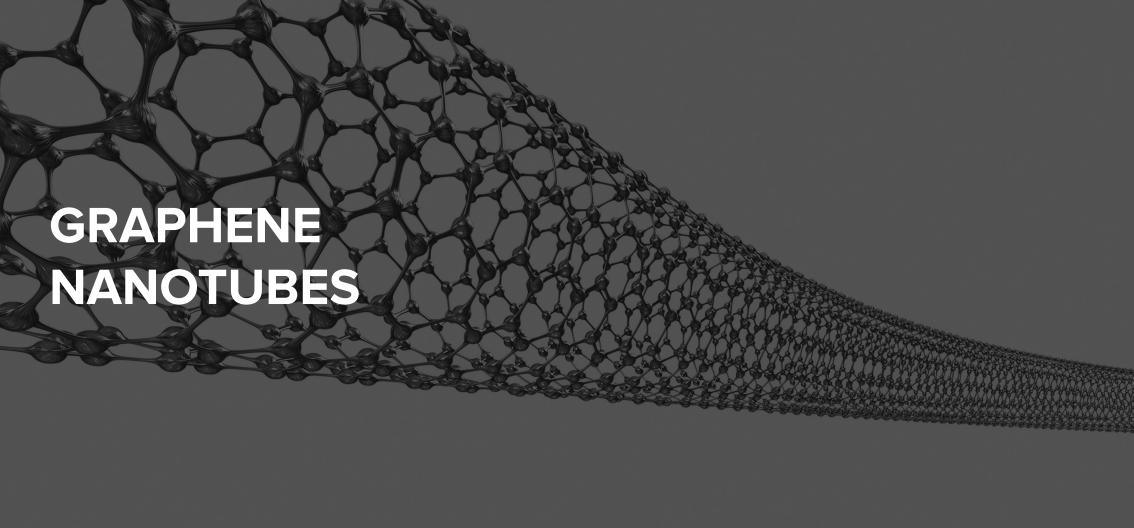

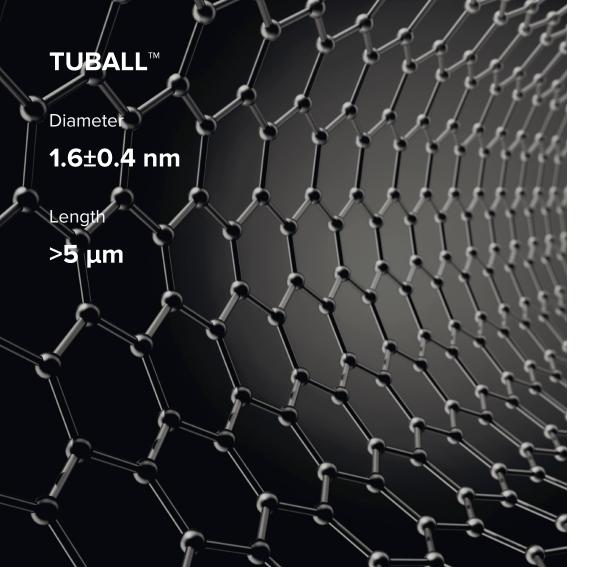

GRAPHENE NANOTUBES

Human existence is shaped by the materials we use. More than 50% of all basic materials can be improved by introducing a universal material: single wall carbon nanotubes. These tiny tubes provide us with a rare opportunity to create nanoaugmented materials that have extraordinary properties.*



Single wall carbon nanotubes (SWCNTs) should be referred to as graphene nanotubes (GNTs) because each nanotube is an extremely thin rolled-up sheet of graphene. The superiority of graphene nanotubes is due to their exceptional properties, such as superior conductivity, high temperature resistance, strength and flexibility.

^{*} Estimates based on report and analysis provided by one of the leading management consulting firms.

GRAPHENE NANOTUBES GRAPHENE NANOTUBES

TUBALL™

While the huge potential of GNTs has been recognised for many years, until recently their wide application in industry was not possible because of an absence of technology for their mass production, their high price, and a lack of methods for introducing them into materials.


TUBALL $^{\text{M}}$ nanotubes are the first GNTs to be available for commercial applications in a wide range of industries. OCSiAl's breakthrough yet low-cost mass-production technology has made the widespread use of nanotubes economically viable while still preserving their high quality.

FEATURES

- Best price-to-performance ratio compared with similar products
- Maintains color, elasticity, durability and other key properties
- Versatile for an extremely wide range of applications
- High-quality nanotubes (G/D ratio >90)
- Benefits start from ultra-low concentrations
- Adds uniform, permanent and stable electrical conductivity
- Enhances mechanical properties of materials

HOW IT WORKS

TUBALL™ provides significant improvements in material properties upon the addition of ultra-low loadings – starting from only 0.01%.

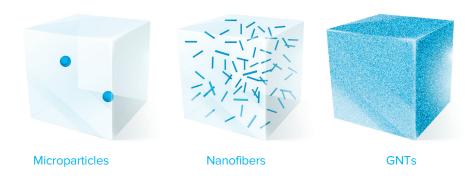


The same concentration of particles (~0.1%) in the same volume.

Unlike conventional additives such as multi wall carbon nanotubes, carbon fibers, and most types of carbon black that unevenly disperse in a material's matrix, GNTs create a 3D uniform reinforced and conductive network.


GRAPHENE NANOTUBES GRAPHENE NANOTUBES


NANOTUBES: THE ULTIMATE CARBON MATERIAL


Conductive carbon black

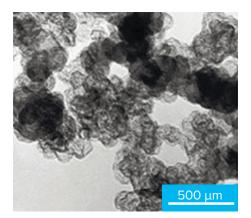


TUBALL™ graphene nanotubes

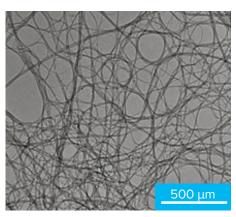

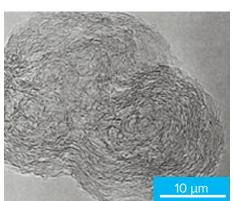

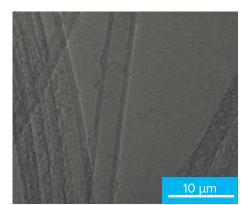

THERMOSETS WITH TUBALL™ SHOW A SIGNIFICANT INCREASE IN CONDUCTIVITY

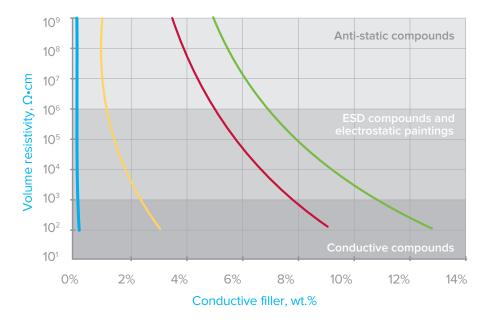

TUBALL™ graphene nanotubes

Multi wall CNT

Premium carbon black

Conductive carbon black


Results for unfilled polyester resin. ASTM D257.

GRAPHENE NANOTUBES GRAPHENE NANOTUBES

TRULY UNIVERSAL MATERIAL

To easily and properly incorporate TUBALL $^{\text{m}}$ into materials, OCSiAl has developed and successfully brought to market a line of pre-dispersed concentrates, masterbatches and suspensions that are compatible with various industry-standard formulations.

For more information on TUBALL $^{\text{\tiny M}}$ application in a specific matrix, refer to the product listing in the catalog or contact the nearest OCSiAl office for assistance in selecting the right solution.

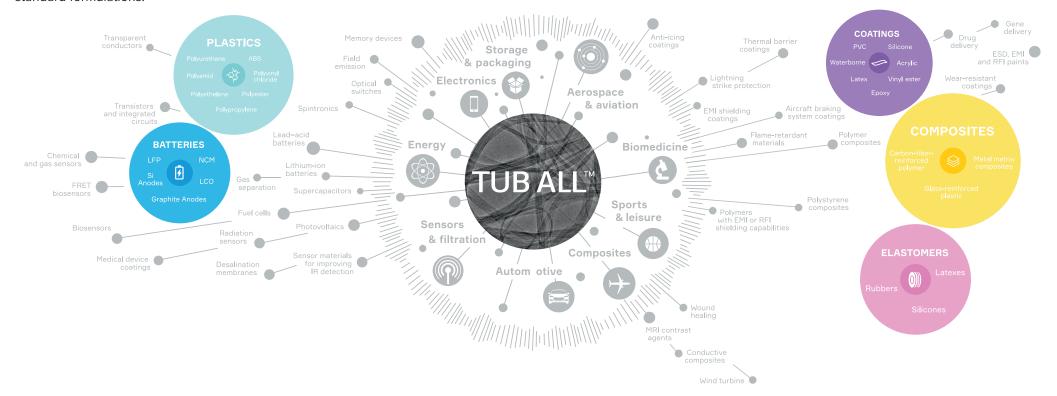

PRODUCTS FOR ENERGY STORAGE

TUBALL™ BATT

TUBALL™ BATT is a ready-to-use dispersion designed to easily incorporate TUBALL™ into electrode formulations during the battery manufacturing process.

TUBALL[™] BATT provides a complete or partial substitute for carbon black in battery electrodes and can replace several percent of carbon black with 0.02-0.1% of TUBALI[™].

TUBALL $^{\mathbb{M}}$ forms conductive 3D networks between active material particles at very low concentrations. The nanotubes reinforce the electrode structure and improve its mechanical stability during cycling. TUBALL $^{\mathbb{M}}$ improves adhesion by establishing strong ties between the particles, reducing the amount of binder required.





TUBALLTM BATT H₂O

Ultrafine TUBALL™ dispersion in H₂O for high-energy Si-based anodes.

Creates a robust network inside the Si-anode and solves the problem of its degradation, allowing Li-ion battery makers to use record high quantities of silicon in the recipes of their cells for the first time and reach the desired energy density targets, as well as unlocking fast-charging capabilities. The key element of Si-based anodes in the majority of silicon anode projects worldwide.

FEATURES

- Compatible with the majority of stateof-the-art SiOx or Si/C anode recipes
- CMC or other binders available
- Low content of foreign impurities
- Ready, easy to use, efficient: proven by leading Li-ion battery makers

CUSTOMER CASE

Customer: 3C battery maker

Product: Pouch cells for mobile phones

Why TUBALL™: Improving volumetric density of the battery is required

Dosage in recipe: 0.05%-0.1% of TUBALL™ in SiOx + graphite in anode slurry

ecipe

The result: 800 Wh/l volumetric density is achieved with a good cycle life performance

BENEFITS



SOLVES THE SI-ANODE DEGRADATION PROBLEM

20% SiO/C anodes with up to 600 mAh/g capacity thanks to TUBALL™ BATT H₂O result in a battery cycle life acceptable to the modern EV industry.



CYCLE LIFE THAT MEETS THE TARGETS OF THE MODERN EV INDUSTRY

Makes it possible to retain >80% capacity after 1,500 cycles.



RECORD HIGH ENERGY DENSITY ACHIEVABLE

Boosts energy density up to 300 Wh/kg and 800 Wh/l due to Si-anode enabling.



FAST-CHARGING ABILITY UNLOCKED

Up to 4C charge-rate achievable due to high silicon content enabled by TUBALL™.



TUBALL™ BATT NMP

Ultrafine TUBALL™ dispersion in NMP for high-energy cathodes.

Unmatched TUBALL™ conductivity for improved battery safety and energy density now comes in an optimized, more cost-efficient dispersion.

FFATURES

- Dispersion optimized specially for cathodes
- More than 80% solids achievable
- Low Fe content
- Choice of PVDF possible
- · Ready and easy to use

CUSTOMER CASE

Company: Manufacturer of cylindrical batteries for various applications

Product: Cylindrical battery 18650

Why TUBALL™: Too much heat from high discharge rate mode as well as not enough power at lower temperatures

Dosage in recipe: 0.04%-0.08% of TUBALL™ in cathode slurry recipe

The result: DCR decreased significantly, improved continuous discharge rate at 0°C

BENEFITS



BOOSTED ENERGY DENSITY

Thanks to 10–60 times lower loading of conductive additive. Up to 98.8% active material content possible in dry electrode.



IMPROVED ADHESION

Two-times higher thanks to the bond strength between cathode particles.



HIGHER SAFETY

Increased safety due to twotimes lower battery resistance increase (DCR).



HIGHER DISCHARGE POWER

Increases >50% at high discharge rates.


PRODUCTS FOR ENERGY STORAGE

ANODES

TUBALL™ graphene nanotubes cover the surface of the silicon particles and create highly conductive and durable connections between them. These connections are so dense, long, conductive, and strong that even when the silicon particles in the anode expand and the material starts to crack, the particles stay well connected to each other through the TUBALL™ graphene nanotubes. This prevents the anode from going out of service—the hugely improved cycle life is enough to meet even the most strict EV manufacturer requirements.

TUBALL™ UNLOCKS MASS PRODUCTION OF EV BATTERIES WITH SILICON ANODES


Bridging silicon anode particles and preventing their degradation during silicon volume expansion and cracking

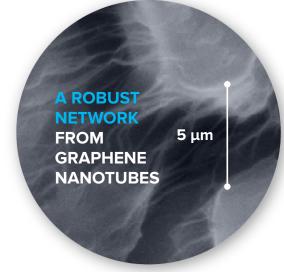

TUBALL™ SOLVES THE SILICON ANODE PROBLEM, PREVENTING ITS DEGRADATION

Silicon-based anodes: 10% SiOx


Drastically improved cycle life with small addition of TUBALL™.

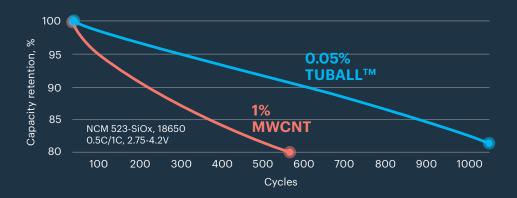


Silicon-based anodes: 90% SiOx

The more silicon in the anode, the more essential becomes the usage of graphene nanotubes in the design.

A higher content of silicon in the anode leads to higher anode volume expansion during cycling, thus the more essential it becomes to have a robust long–distance conductive network in the electrode keeping silicon anode particles connected to each other, which TUBALL™ is able to create in an unparalleled manner.

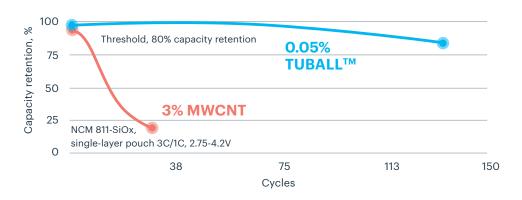

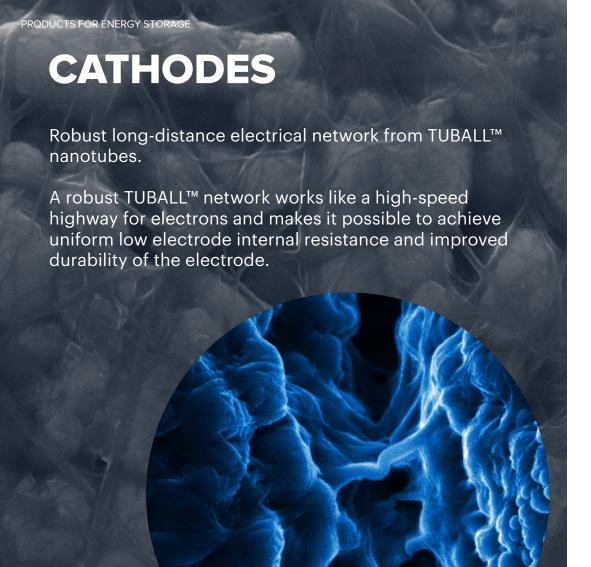

TUBALL™ NETWORK IMPROVES KEY PARAMETERS

In comparison with MWCNT and carbon black cathode formulas:









lower battery resistance increase (DCR)

10-60× >50%


lower loading

at high discharge rates >3C

increase in bond strength between cathode material particles

LOW DOSAGE EXAMPLE IN NCM

Less than 0.1% TUBALL™ graphene nanotubes provides higher energy density. This concentration is 10–60 times lower than that required when using multi-wall carbon nanotubes or carbon black as a conductive material.

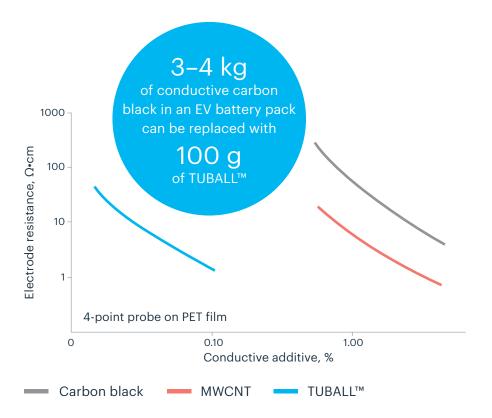


DCR IN NCM 811 EXAMPLE

The fact that TUBALL™ bundles create highly conductive longdistance routes for electrons between active material particles leads to the fact that even a small amount of TUBALL™ graphene nanotubes is enough to create well-developed conducive networks in the electrode at an ultralow working dosage and thus reduce internal battery cell resistance (DCR).

The lower battery DCR results in lower temperature buildup and thus a reduced risk of a battery fire. This is a crucial safety benefit made possible by TUBALL™ graphene nanotubes.

DCR increase during 45°C cell cycling

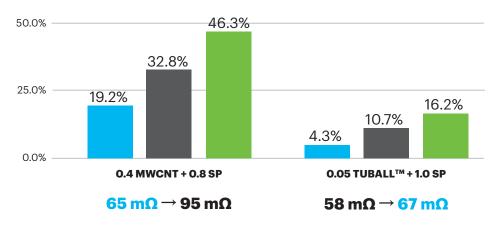


Formulation with TUBALL™ demonstrates significantly lower DCR increase. Cells with TUBALL™ reach initial DCR level of cells without it only after 600 cycles.

THICK CATHODES AND ANODES


Robust TUBALL™ network makes it possible to create electrodes with record high electrode thickness by strengthening the bond between active material particles.

No cracks in the electrode with TUBALL™ even at very high electrode loadings.

LFP example:

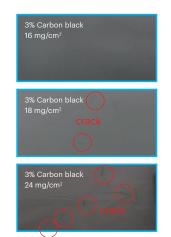



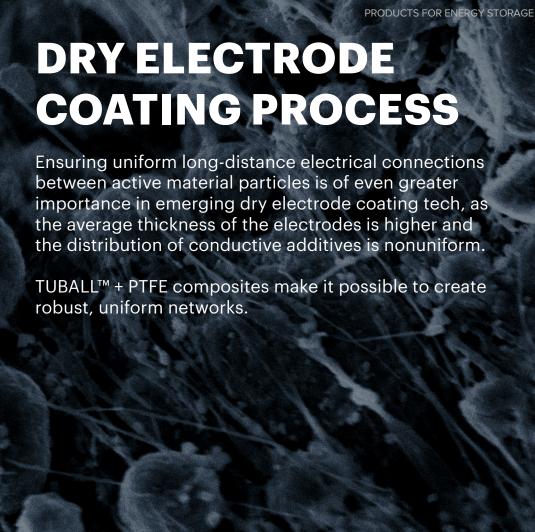

TUBALL™ BATT READY-TO-USE PRODUCTS FOR LIBs

	GNTs, %	DISPERSING AGENT, %	METAL IMPURITIES, PPM	DESCRIPTION
FOR CATHODES				
0.4% TUBALL™ BATT NMP	0.4%	PVDF 2%	1–5	Fine TUBALL™ dispersion in NMP to reduce DCR, maximise energy density due to higher active material content, improve electrode cohesion and C-rate, increase electrode thickness.
1% TUBALL™ BATT NMP	1%	PVDF 2%	1–5	Next generation of TUBALL™ dispersions in NMP with 2.5× higher TUBALL™ content. Cost-parity with high-quality MWNCT.
0.4% TUBALL™ BATT HNBR	0.4%	HNBR 0.4%	1–5	Ultrafine TUBALL™ dispersion in NMP that can reduce DCR and improve cycle-life even further. Recommended for LCO chemistries.
FOR Si/C ANODES				
0.4% TUBALL™ BATT H₂O	0.4%	CMC 0.6%	1–5	Fine TUBALL™ dispersion in H ₂ O. Improves cycle-life of SiOx, Si/C, and metallurgical Si anodes, enabling their industrial adoption in high-energy cells. Industry standard.
0.8% TUBALL™ BATT H₂O	0.8%	CMC 0.8%	1–5	Next generation of TUBALL™ dispersions in H₂O with 2× higher TUBALL™ content.



PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMERS

APPLICATION EXAMPLES



Non-marking solid tires



O-rings, hoses, jackets, heat-resistant cords and plates



Cables



Pressure-sensitive adhesive film



Textile coatings



Rubber seals



Conveyor belts and rollers



ESD gloves

PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMER

TUBALL™ MATRIX FOR SILICONES

impacting the host matrix.

TUBALL™ MATRIX 601, 602 and 605 are nanotube concentrates specifically designed to provide superior electrical conductivity to silicone compounds (LSR – liquid silicone rubber, RTV – room temperature vulcanized rubber, and HCR – high consistency rubber) while retaining mechanical properties and minimally



PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMERS

TUBALL™ MATRIX 601 / 602 / 605

PROPERTY — Electrical conductivity







TUBALL™ MATRIX 601 Carrier:

polydimethylsiloxane oil

KEY APPLICATIONS

- LSR (liquid silicone rubber)
- RTV (room temperature vulcanised) silicones

TUBALL™ MATRIX 602

Carrier: vinyl-terminated polydimethylsiloxane

KEY APPLICATIONS

- LSR (liquid silicone rubber)
- HCR (high consistency rubber)

TUBALL™ MATRIX 605

Carrier: silicone gum


KEY APPLICATIONS

 HCR (high consistency rubber)

CONDUCTIVE SILICONES WITH TUBALL™ MATRIX

	Currently available	TUBALL™ MATRIX
Volume resistivity level	<100–10 ⁸ Ω•cm	<100–10 ⁸ Ω•cm
Concentration of conductive filler	30–70 wt.%	0.5–5 wt.%
Retain mechanical properties	No	Yes
Allow coloration	No	Yes


FULL RANGE OF RESISTIVITY

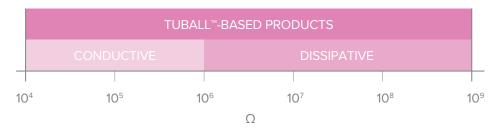

PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMERS


MECHANICAL PROPERTIES OF RTV WITH 3 wt.% TUBALL™ MATRIX 601 IN COMPARISON WITH CONDUCTIVE CARBON BLACK*

Volume resistivity 200 Ω -cm

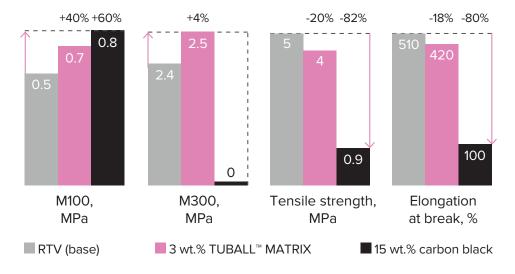


TUBALL™ MATRIX makes it possible to produce conductive compounds without impairing flexibility or mechanical properties

VOLUME RESISTIVITY OF LSR SILICONE WITH TUBALL™ MATRIX 601 IS IN THE RANGE 10–10¹⁶ Ω•cm*

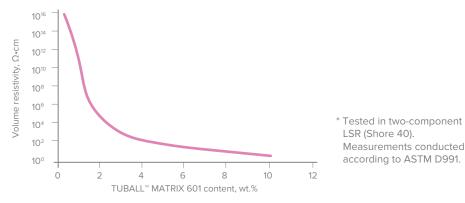

VOLUME RESISTIVITY OF HCR SILICONE WITH TUBALL™ MATRIX 605 IS IN THE RANGE <10–10¹¹ Ω•cm*

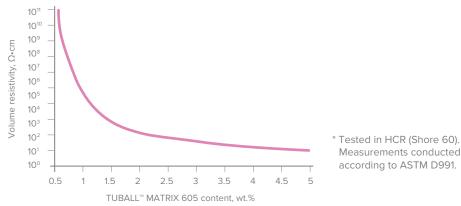

^{*} Measurements conducted according to ASTM D412. Study was conducted with conductive carbon black VULCAN® XC72R.

PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMER

TUBALL™ MATRIX FOR RUBBERS

TUBALL™ MATRIX 600-x series are nanotube concentrates designed to impart required electrically conductive properties to rubbers and to significantly enhance their mechanical properties.



PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMER

TUBALL™ MATRIX 610 / 620.3

PROPERTY — Electrical conductivity





TUBALL™ MATRIX 610

Carrier: Polymer, paraffinic mineral oil

KEY APPLICATIONS

• EPDM

TUBALL™ MATRIX 620.3

Carrier: Polymer, TDAF oil

KEY APPLICATIONS

- NR
- BR

FEATURES OF TUBALL™ MATRIX FOR RUBBERS:

- Suitable for anti-static, static dissipative, and conductive applications
- Extremely low loadings of nanotubes that preserve properties
- Retain mechanical properties including softness
- Maintain rheology and viscosity
- Standard processing and mixing equipment
- Allows for colored ESD compounds

Ensuring long service life and stable conductive properties to crucial products and processes, nanotube-modified rubbers are widely used in the electronics, automotive, and tire, oil & gas, and other industries.

OCSiAl has developed a variety of products based on TUBALL $^{\text{\tiny M}}$ graphene nanotubes for EPDM, NBR, SBR, blends of NR/BR, FKM, and other types of rubbers.








PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMERS


IMPROVEMENT OF TEAR STRENGTH AND TENSILE PARAMETRS EVALUATION IN 3 VISCOSITY TYPES OF EPDM

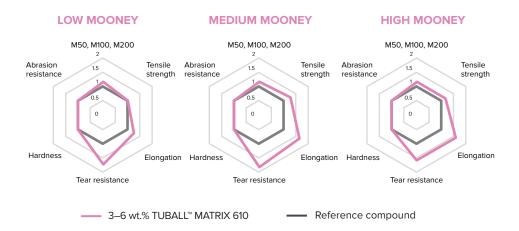

- M50, M100, M200 increased by 15–20%
- Tensile strength increased by 16–23%
- Tear resistance increased by 25–103%

- Abrasion resistance increased by 3–11%
- · No drawback in elasticity
- Electrical restivity 10⁶−10⁹ Ω·cm

MECHANICAL PROPERTIES OF ANTI-STATIC NON-MARKING NR/BR SILICA BASED COMPOUND WITH TUBALL™ MATRIX 620.3

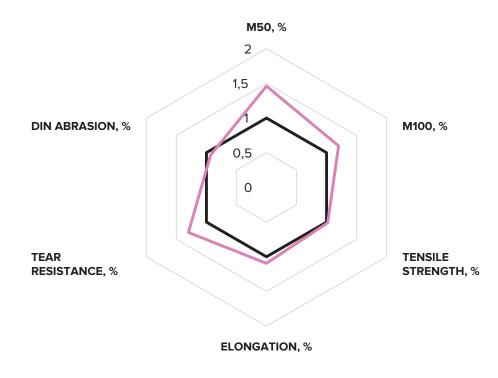

Reference

—— TUBALL™ MATRIX 620.3 (0.3 wt.% of TUBALL™)

PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMER

TUBALLTM LATEX

 $\mathsf{TUBALL}^{\mathsf{IM}}$ LATEX is a water-based suspension for manufacturing latex gloves and latex products with anti-static properties, while retaining mechanical properties and minimally impacting the host matrix.

TUBALL™ LATEX makes it possible to attain permanent and humidity-independent conductivity that is fully compliant with the most demanding applications, including the new European standard EN 16350:2014 (EN 1149) for anti-static properties in safety wear.



PRODUCTS FOR ELASTOMERS

PRODUCTS FOR ELASTOMERS

TOUCHSCREEN OPERATION WITH INDUSTRIAL GLOVES

TUBALL™ graphene nanotubes provide an anti-static effect that allows smooth operation of touchscreens without gloves having to be removed and that ensures worker and product protection.


KEY BENEFITS

- Stable ESD properties according to international standards for protective wear
- Standard liners without conductive yarns
- No changes in formulation or dipping process
- Allows coloration



ANTI-STATIC NITRILE LATEX WITH TUBALL™

	Current solutions	Results with TUBALL™
Specific resistance level	10^{7} – $10^{11} \Omega$	$10^2 - 10^{11} \Omega$
Concentration of conductive filler	5–25 wt.%	0.03-0.075 wt.%
Negative impact on mechanical properties	Yes	No
Color retention	No	Yes

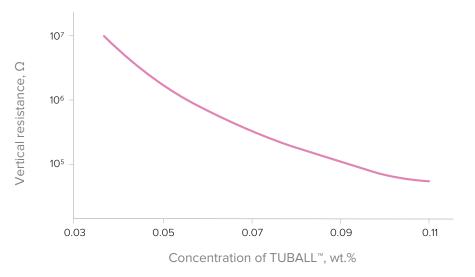

Measurement of electrical resistivity according to EN 16350:2014 carried out on teraohmmeter: TO-3 cable; electrode type - TE 50 for textile measurement (DIN 54345-1, DIN EN 1149-1 and DIN EN 1149-2)

PRODUCTS FOR ELASTOMERS

PRODUCTS FOR ELASTOMERS

ESD GLOVES WITH TUBALL™

PU & NITRILE LATEXES

HOW TO MAKE YOUR GLOVES CONDUCTIVE WITH TUBALL™

industrial
0.06 wt.%

cleanroom 0.06 wt.%

industrial*
0.06-0.1 wt.%



ELECTRICAL RESISTANCE $10^7 \Omega$



User-friendly water-based dispersion available in two concentrations of TUBALL™



Standard compounding and dipping process



Touchscreen gloves compliant with international standards for protective wear

^{*}Gloves made by industrial partners with TUBALL™

PRODUCTS FOR ELASTOMERS PRODUCTS FOR ELASTOMERS

TUBALL™ GRAPHENE NANOTUBE SOLUTIONS FOR ELASTOMERS

		TARGET SYSTEMS													
PRODUCT	CARRIER MEDIUM	LSR silicone	RTV silicone	HCR silicone	EPDM	NR	BR, IR, SBR	NBR, PU, NR latex							
SILICONES															
MATRIX 601	Polydimethylsiloxane														
MATRIX 602	Siloxanes and silicones vinyl group-terminated														
MATRIX 605	Siloxanes and silicones vinyl group-terminated														
LATEX															
LATEX H ₂ O 0.5% (NSA)	Water + anionic surfactant (sodium salt of polynaphthalene sulphonic acid)														
RUBBERS															
MATRIX 610	Polymer, paraffinic mineral oil														
MATRIX 620.3	Polymer + plasticizer														



TUBALL™ MATRIX 200 / 300-X SERIES

TUBALL™ MATRIX 200 / 300-x series are nanotube concentrates designed to provide permanent, uniform electrical conductivity to various materials: epoxy, polyurethane, polyester, etc. TUBALL™ MATRIX is compatible with a variety of color shades while meeting ESD standards.



APPLICATION EXAMPLES



GFRP pipes



Industrial rollers



Equipment for mines, electronics, chemical plants and petrol stations



Housing/packaging for sensitive electronics, and combustible powders or liquids



Epoxy and PU anti-static flooring



Lining coatings





Gelcoats and moldcoats



Conductive primers for plastic components

TUBALL™ MATRIX CONDUCTIVITY AND COLOR

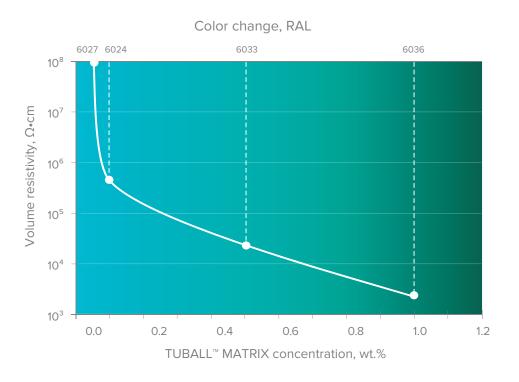

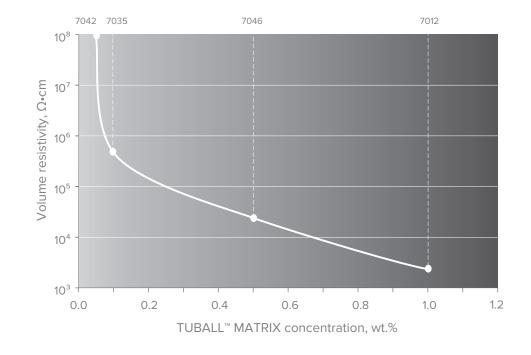

Note: all samples include 5 wt.% of ${\rm TiO}_2$ as a whitening agent. Results for epoxy resin D.E.R. 351. ASTM D257

TUBALL™ COAT_E


TUBALL™ COAT_E is an easy-to-use single wall carbon nanotube suspension in water that provides permanent anti-static properties to waterborne paints and coatings with minimal impact on their color and mechanical properties.

TUBALL™ COAT_E is suitable for production of anti-static waterborne paints and coatings intended for the following applications:

- UV coating
- Packaging for electronics




TUBALL™ COAT_E IS SUITABLE FOR COLORED AND TRANSPARENT SYSTEMS

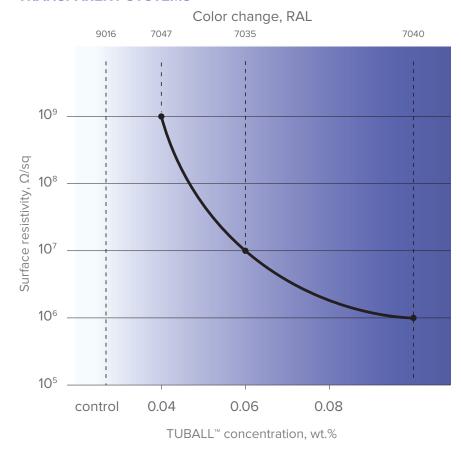

Permanent electrostatic dissipative and conductive properties with color and/or transparency are achieved by simply mixing TUBALL $^{\text{\tiny M}}$ COAT_E with the paint system.

- Easy to use
- Efficient ESD protection
- Permanent conductivity
- Suitable for colored and transparent systems

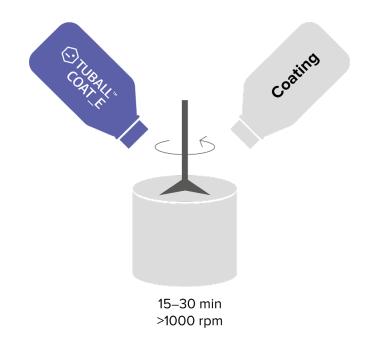

69

TUBALL™ GRAPHENE NANOTUBE SOLUTIONS FOR COMPOSITES & COATINGS

									Targ	et syst	ems						
				Solvent-free					Solvent-based					Water-based			
PRODUCT CARRIER COMPOSITION	Ероху	Polyester	Vinyl-ester	Polyurethane	Epoxy	Polyester	Vinyl-ester	Polyurethane	Melamine	Phenolic resoles	Acrylic	Epoxy	Polyurethane	Acrylic	Phenolic resoles		
TUBALL™ MATRIX	concentrates (Black t	flakes paste @ standard dosage 0.1%–1.0%)															
MATRIX 201	Plasticizer	Fatty acid glycidyl ester (2,3-epoxypropyl neodecanoate, CAS-No. 26761-45-5)															
MATRIX 202	Plasticizer	Fatty carboxylic acid ester derivatives															
MATRIX 203	Plasticizer + stabilizing agent	Fatty acid glycidyl ester (2,3-epoxypropyl neodecanoate, CAS-No. 26761-45-5) + (polymer + ammonium salt of polyolefins-based derivative (CAS-No. 398475-96-2))															
MATRIX 204	Plasticizer + stabilizing agent	Triethylene glycol dimethacrylate (CAS-No. 109-16-0) + ammonium salt of polyolefins-based derivative (CAS-No. 398475-96-2)															
MATRIX 207	Plasticizer	Alkyl glycidyl ether (Oxirane, mono[(C12-14-alkyloxy)methyl] derivative, CAS No. 68609-97-2)															
MATRIX 208	Plasticizer + stabilizing agent	Alkyl glycidyl ether (Oxirane, mono[(C12-14-alkyloxy) methyl] derivative, CAS-No. 68609-97-2) + ammonium salt of polyolefins-based derivatives (CAS-No. 398475-96-2)															
MATRIX 209	Plasticizer	Fatty carboxylic acid ester derivatives															
MATRIX 301	Surfactant	Ethoxylated alcohol (C12-15-branched and linear, ethoxylated propoxylated, CAS No. 120313-48-6)															
MATRIX 302	Surfactant + stabilizing agent	Alkylene glycol derivative + stabilizing agent ((disodium 2,2'-([1,1'-biphenyl]-4,4' diyldivinylene) bis (benzenesulphonate, CAS No. 27344-41-8))															
TUBALL™ suspens	sions COAT_E (Black I	iquid @ standard dosage 1.5%–6.4%)															
COAT_E H ₂ O 0.4% (SDBS) beta	Water + anionic surfactant	Water + anionic surfactant (sodium dodecylbenzenesulfonate, CAS No. 25155-30-0)															
COAT_E H₂O 0.4% (DBD) beta	Water + distyrylbiphenyl- derivative	Water + distyrylbiphenyl-derivative, (CAS No. 27344-41-8)															

70 Based on Selection Guide V07 71



PRODUCTS FOR THERMOPLASTICS PRODUCTS FOR THERMOPLASTICS

TUBALL™ MATRIX 800-X SERIES

TUBALL™ MATRIX 800-x series is a line of concentrates based on TUBALL™ graphene nanotubes that has been specifically designed to provide superior electrical conductivity to thermoplastic materials, while retaining mechanical properties and minimally impacting the host matrix.

TUBALL™ MATRIX 800 line is designed for the most demanding applications in the automotive, petrochemical, oil and gas, healthcare, pharmaceutical and electronics industries.



PRODUCTS FOR THERMOPLASTICS PRODUCTS FOR THERMOPLASTICS

APPLICATION EXAMPLES



ESD containers



Semiconductive shielding materials



Ventilation ducting



Anti-static textiles



Anti-static signal lamps



Treadmill belts



Conductive compounds for e-painting



Glass fiber filled thermoplastics injection molded parts

PRODUCTS FOR THERMOPLASTICS PRODUCTS FOR THERMOPLASTICS

TUBALL™ FOR THERMOPLASTICS

			Target systems														
PRODUCT	CARRIER	Form*	Polyethylene	PE rotomolding	Polypropylene	PVC	Thermoformed HIPS	TPU	GF PPS	ABS	PC	PC-ABS	PA	GF filled PA	GF filled PBT	Powder coatings	PET
TUBALL™ MATRIX concen	trates (pellets or black flakes paste @ standard dosage 0.3%–3.0%)																
MATRIX 808	Polyol ester	PLT															
** MATRIX 814	Epoxidized fatty acid glyceride + stabilizing agent (CAS-No. 162627-31-8, CAS-No. 64742-55-8)	PST															
MATRIX 815 8	Polyethylene wax	PLT															
MATRIX 821 8	Reaction mass of fatty acids, montan-wax, ethylene esters	PLT															
TUBALL™ suspensions COAT_E (black liquid @ standard dosage 1.5%–6.4%)																	
COAT_E 0.4% (SDBS) beta	Water + anionic surfactant (sodium dodecylbenzenesulfonate, CAS-No. 25155-30-0)	SPSN															

^{*} PLT – pallets, PST – paste, SPSN – suspension ** PVC plastisol specific

PRODUCTS FOR THERMOPLASTICS PRODUCTS FOR THERMOPLASTICS

TUBALL™ MATRIX 808 / 814

PROPERTY — Electrical conductivity



TUBALL™ MATRIX 808

Carrier: polyol ester

Materials: TPU, GF filled PPS, ABS, PC, PC-ABS, PA, GF filled PA, GF filled PBT, Thermoformed HIPS

Working dosage:

0.5–5 wt.% **Shape:** pellets



TUBALL™ MATRIX 814

Carrier: epoxidized soybean oil and polymeric stabilizing agent

Materials: PVC-plastisol

Working dosage: 0.25–2 wt.%

Shape: paste

FEATURES OF TUBALL™ MATRIX FOR THERMOPLASTICS:


- Provides thermoplastic compounders with opportunities to develop new conductive products
- Surface resistivity of 10⁸–10⁹ Ω/sq*
- Volume resistivity of 10³–10⁹ Ω·cm*
- Maintains good balance of mechanical properties
- Stable performance reducing the number of out-of-spec parts
- · Permanent homogeneous resistivity without "hot spots"
- Good processability
- High surface quality
- Allows production of conductive parts that retain colors
- Freedom to incorporate other functional ingredients
- * Dosages and values can vary depending on the formulation, processing and products. The shown values are mentioned as the typical reference




SAFETY INFORMATION

APPLICATION EXAMPLE: CONDUCTIVE PVC-PLASTISOL

TUBALL™ MATRIX 814 provides a full range of electrical resistivity, while allowing for a wide range of colors to meet customer requirements.

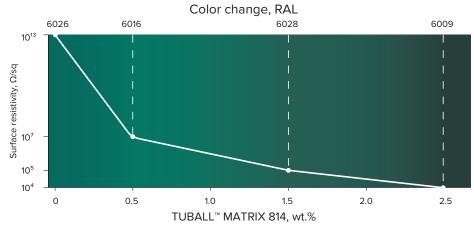

TUBALL™ MATRIX 814 maintains and even improves the mechanical properties of conductive PVC-plastisol compounds.

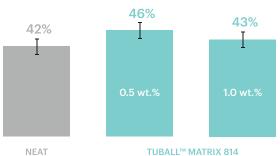


OCSiAl internal PVC plastisol formulation. ASTM D5963-04.

APPLICATION EXAMPLE: CONDUCTIVE GLASS FIBER-FILLED **POLYAMIDE**

TUBALL™ MATRIX provides a full range of electrical resistivity while maintaining mechanical properties.

Surface resistivity $10^5 - 10^7 \Omega/\text{sg}$ Volume resistivity $10^3 \, \Omega \cdot \text{cm}$

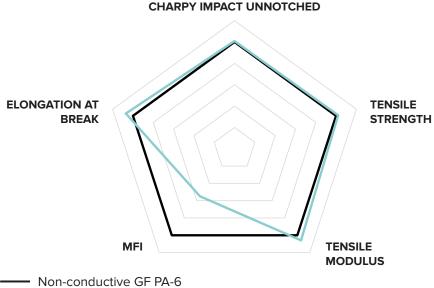

Conductive GF PA-6 with 2 wt.% TUBALL™ MATRIX 808

OCSiAl internal study. Injection molded samples. Values can vary depending on processing, products and glass fiber content.

COMPANY

SAFETY INFORMATION WARRANTIES AND DISCLAIMER

SAFETY INFORMATION

OCSiAl produces nanotube dispersions and concentrates to enable a simple and easy integration process. TUBALL $^{\text{\tiny M}}$ MATRIX products and TUBALL $^{\text{\tiny M}}$ suspension products were developed to minimize handling requirements and provide all manufacturers access to the superior performance of graphene nanotubes.

For handling and safety information please refer to the Safe Handling guide.



More at tuball.com

WARRANTIES AND DISCLAIMER

The information provided by OCSiAI in this Product Catalog is for general informational purposes only and under no circumstances does it constitute an offer to enter into a binding agreement with OCSiAI.

OCSiAl makes every reasonable effort to ensure that all information in this Product Catalog is correct. However, OCSiAl makes no representation or warranty of any kind, whether express or implied, regarding the accuracy, completeness, appropriateness, or suitability of the information contained therein.

OCSiAl will not be liable for damages of any kind arising from the use of any information contained in this Product Catalog, including, but not limited to direct, indirect, incidental, punitive or consequential damages, unless otherwise specified in writing.

O C Si Al

OCSiAl is the world's largest manufacturer of graphene nanotubes, owning the only scalable technology capable of synthesizing them in industrial volumes.

A graphene nanotube, also known as a single wall carbon nanotube, is a rolled-up sheet of graphene possessing exceptional properties, such as high electrical and thermal conductivity, strength, and flexibility. These unique characteristics make graphene nanotubes a versatile additive with potential applications across up to 50% of global materials markets. When integrated into materials, they form a 3D reinforcing conductive network, providing a new set of properties to the final product. Advanced high-performance batteries, composites, plastics, coatings, and other materials additionally enable companies to contribute to reductions in CO₂ emissions at all stages of manufacturing and during usage of new products, stimulating global efforts to achieve carbon neutrality.

OCSiAI produces high-purity graphene nanotubes under the brand name TUBALL[™] and accelerates the transformation process of nanotubes from the laboratory to being an industrial-scale material by simplifying their handling. The company has developed TUBALL[™]-formulated technologies for various applications.

TUBALL™ BATT, an ultrafine dispersion of graphene nanotubes in liquid carriers, is a ready-to-use solution designed for high-energy anodes and cathodes. OCSiAI nanotubes create long, robust electrical networks between active material particles, improving key battery characteristics, including cycle life, DCR (reduced resistance), C-rate performance, and cohesion between active battery material particles, making the battery electrodes more durable. Graphene nanotubes unlock new battery technologies, including high-silicon-content anodes, thick LFP cathodes, fast-charging graphite anodes, and more. They can be applied in both conventional and

emerging battery tech, such as a dry battery electrode coating process, and in solid-state batteries.

The TUBALL™ MATRIX nanotube concentrate product line is specifically designed for various elastomers, thermosets, and thermoplastics. It is widely used as a conductive filler to impart anti-static and ESD properties. Depending on the specific requirements, the working dosage is in the range of 0.1–1 wt.% in the final compound. TUBALL™ MATRIX is also increasingly being used as a reinforcing additive in various types of materials, enabling the production of lightweight, strong, smart, conductive, and colored products.

The company's technical support centers are located in Luxembourg, China, and Serbia. They are designed to be capable of completing the full development chain: from initial research to the fine-tuning of the application of TUBALL" in pilot industrial lines.

TUBALL™ graphene nanotubes are authorized for use across a wide range of industries. They comply with EU-REACH and US Environmental Protection Agency regulations, allowing the commercialization of up to 100 tonnes of single wall carbon nanotubes annually in Europe and an unlimited tonnage band in the US.

Headquartered in Luxembourg, OCSIAI is represented throughout Europe, the US, South Korea, China, Hong Kong, Canada, Mexico, Malaysia, Taiwan, Japan, and India. OCSIAI collaborates with more than 1,500 companies in over 50 countries worldwide and enjoys a network of 25 distributors.



CONTACT YOUR LOCAL DISTRIBUTOR TO ORDER A SAMPLE AND OBTAIN TECHNICAL/SAFETY DATA SHEETS

ASIA

KOREA

11F, 254-8 Gongdeok-dong, Mapo-gu, Seoul 04212, Korea +82 32 260 0407 asiapacific@ocsial.com

HONG KONG

Room 1102, 11/F, Lippo Sun Plaza, 28, Canton Road, Tsim Sha Tsui, Kowloon, Hong Kong +852 3575 3946

CHINA

Room 1509, Pengrunda Commercial Plaza, No. 3368 Houhaibin Road, Nanshan District, Shenzhen, Guangdong, China +86 755 867 00059

Ground floor, Unit 4, Building 7, No.160, Basheng Road, Pudong district, Shanghai, China +86 135 9012 5295

china@ocsial.com

JAPAN

Tokyo, Japan 070-1421-0331 japan@ocsial.com

INDIA

Shivam centrium, Sahar road, Koldongri, Andheri East, Mumbai, 400 069, India +91 22 6288 4200 india@ocsial.com

EUROPE

LUXEMBOURG

1 Rue de la Poudrerie, L-3364, Leudelange, Grand Duchy of Luxembourg +352 27990373 europe@ocsial.com

SERBIA

Balkanska 21, Belgrade, Serbia +381 692083170 balkan@ocsial.com

NORTH & SOUTH AMERICA

USA

950 Taylor Station Road, Suite #W, Gahanna, OH 43230, USA +1 415 906 5271 usa@ocsial.com

